


SanDisk Cruiser micro MP3 COMPANION

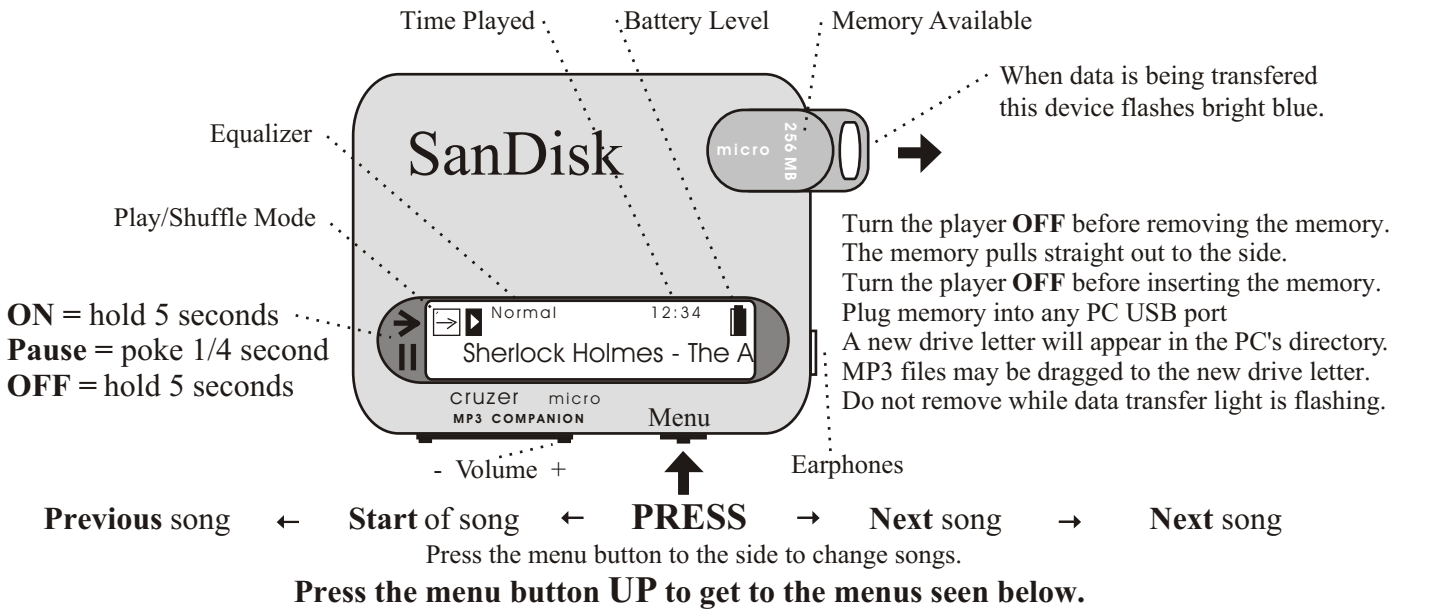

EXIT	Play Mode	Equalizer	Select Folder	Settings	Delete	Lock	EXIT
↑	↔	↔	↔	↔	↔	↔	↔
↑	Normal	Normal	Folder 1	Contrast	Delete File	Unlock	↑
	Shuffle Folder	Pop	Sub-Folder A	0 - 100 %	Exit ↑	Exit ↑	
	Shuffle Once	Rock	Sub-Sub-Folder a	Backlight			
	Shuffle Repeat	Soft Rock	Sub-Sub-Folder b	Timed ON/OFF			
	Track Once	Techno	Sub-Sub-Folder c	Language			
	Repeat Folder	Party	Sub-Sub-Folder d	English/Francia			
	Repeat All	Reggae	Sub-Folder B	Information			
	Repeat Track	Jazz	Sub-Sub-Folder a	MB-Free - Version 1.1			
	Exit ↑	Classical	Sub-Sub-Folder b	LCD - Orientation			
		Live	Sub-Sub-Folder c	UP/DOWN			
		Voice	Sub-Sub-Folder d	Factory Settings			
		Bass Boost	Sub-Folder D	Exit ↑			
		Hall	Sub-Sub-Folder a				
		Custom +++++	Sub-Sub-Folder b				
		Exit ↑	Sub-Sub-Folder c				
			Sub-Sub-Folder d				
			Folder 2				
			Sub-Folder A				
			Sub-Sub-Folder a				
			Sub-Sub-Folder b				
			Sub-Sub-Folder c				
			Sub-Sub-Folder d				
			Sub-Folder B				

Press the Menu button up ↑ to activate a folder and to the sides ↔ to move thru a folder.

Made for George Pauley
 Charles Scamahorn